

# Cotton Candy Machine

## Operating Instructions

### Set up

- Machine must be plugged into a grounded outlet to prevent electrical shock.
- Floss head rotates at 3450 RPM. Operator must keep hands and face clear of the floss head and keep spectators at a reasonable distance.
- Place the machine on a sturdy table or countertop with the controls facing the operator.
- Unscrew the two transport screws on the unit on either side of the floss head. **DO NOT run the machine with these screws in the “up” position.**
- Place the floss bowl on the motor assembly. It does not connect or hook to the machine in any way.
- Place the mesh stabilizer around the edges of the bowl, overlapping the ends slightly to fit. Slide the metal clips over the bowl and the mesh at several “corners” of the bowl.
- Place the clear bubble on top of the floss bowl, pointing the opening on the same side as the machine controls. This is where the operator will stand.
- Fill the floss head with one cup or less of floss sugar. When adding sugar to the floss head, always fill it 90% full to obtain a balanced condition in the head and eliminate vibration. **DO NOT add sugar with the motor running!**
- Turn on both the heat and the motor switches, and turn the heat on high until you start to see the floss forming. Then turn the heat back to the medium setting. After warm-up, equipment should make good floss at a reduced setting. Never let the machine operate with the heat so high it produces smoke or causes the sugar to burn.