

# Snocone Machine Instructions

## Please read this carefully

1. Keep children away. Unplug when not in use.
2. Never put your fingers or any object into the shaver body while the motor is running. Serious injury may occur. (Special Occasion Rentals does not assume any liability for injury due to careless handling and/or reckless operation of this equipment).

## SnoCone Procedures

1. Fill the hopper to within an inch of the top with ice cubes or block ice (no larger than 3" to 4") The larger the pieces, the better the snow.
2. Toggle the **POWER** switch to the ON position.
3. While pushing the MOTOR switch, apply downward pressure to the pusher handle. Apply firm and even pressure to make the best snow. Practice will allow you to gauge when to stop pressing. This allows the ice to resettle against the shaver head. Too much pressure will result in snow that is coarse; too little pressure will make the snow mushy.

**NOTE:** Never allow any foreign or metallic objects around the shaver area of the machine. Ice picks, scoops, and debris that may be in the ice often damage the blades.

### Tips for successful snow cone

Use a slow even pressure on the pusher handle.